

User Guide

Gigabit PCI/PCIe Network Adapter

Model No.: XM-NA3500

XM-NA3800



Contents

Package Contents 3		
Chapter 1	Product Overview	
	1.1 Introduction	. 3
	1.2 Features	. 4
	1.3 LED Status	. 4
Chapter 2	Installation Guide	. 4
	2.1 Hardware Installation	. 4
	2.2 Software Installation	. 5
	2.2.1 For Windows 7	. 5
Appendix A	: Specification	. 8

TRADEMARKS

MS-DOS, Microsoft, Windows 95/98/98SE/NT/2000/ME/XP/7/8/8.1/10 are trademarks of Microsoft Corporation Apple, Macintosh and Mac are trademarks of Apple, Inc.

*All other third-party brands and names are the property of their respective owners



Package Contents

The following items should be found in the package:

- XM-NA3500 Gigabit PCI Network Adapter or XM-NA3800 Gigabit PCIe Network Adapter
- Low profile bracket
- One CD Disk contains Drivers and User Guide

Note: The above list is for reference only. The actual content may differ according to the product you purchased. Please save the original packaging material for future reference. If any of the listed items are damaged or missing, please contact with your seller.

Conventions

The "Adapter" mentioned in this User Guide stands for following products: XM-NA3500 or XM-NA3800 without any explanations. All these devices are sharing this User Guide. All product models listed just differ in appearance and figure in this User Guide.

Chapter 1 Product Overview

1.1 Introduction

The Adapter, XM-NA3500 or XM-NA3800 is a highly integrated and cost effective Gigabit PCI or PCIe Ethernet Adapter which is fully compliant with IEEE 802.3, IEEE 802.3u and IEEE 802.3ab standards. These gigabit network adapters keep low cost and eliminate usage barriers. It is the easiest way to upgrade a network environment from 10/100Mbps to 1000Mbps. It supports 10/100Mbps network speed automatically both in Half-Duplex and Full-Duplex transfer mode, and 1000Mbps in Full-Duplex transfer mode, by using Auto Negotiation technology to detect the network speed.



1.2 Features

- Fully complies with IEEE 802.3, 802.3u, 802.3ab standards
- Support IEEE 802.1p Layer 2 Priority Encoding; IEEE 802.1q VLAN Tagging
- Compliant with 32-bit PCI or PCIe Standard
- Support 10/100/1000Mbps NWAY Auto Negotiation
- Support Jumbo Frame (XM-NA3500)
- Support ACPI, PCI power management
- Wake-on-LAN and remote wake-up support
- Crossover Detection & Auto-Correction
- Support Standard and Low-Profile Chassis
- LED indicator for monitoring Link/Act

1.3 LED Status

The Link/Act LED of Adapter indicates 10/100/1000Mbps status. They will light when connection is built, and glitter when the Adapter is transmits and receive data.

Chapter 2 Installation Guide

2.1 Hardware Installation

To Install the Adapter, please follow these steps listed below:

- 1. Turn off your computer and unplug the power cord and all cables
- 2. Remove your computer's case cover
- 3. Locate an available PCI/PCIe slot
- 4. Remove the screw that secures the slot bracket (the small piece of metal that covers the opening for PCI/PCIe card on the back panel of your computer), then remove the slot bracket
- 5. Carefully insert the Adapter into the PCI/PCIe slot. Please avoid touching the gold connector of the Adapter
- 6. Secure the Adapter to the case by using the screw you removed from the slot bracket
- 7. Reinstall your computer's case cover
- 8. Plug in the power cord and all other cables, and then turn on your computer



2.2 Software Installation

This section will guide you through the installation procedures for Windows 7. Please follow the steps.

2.2.1 For Windows 7 Installation

- 1. Insert the CD driver disk into CD-ROM drive. The Autorun setup program will display, or you click on the "Browse CD" to find other OS drivers in the CD.
- 2. Click **Driver Installation** button to install.
- 3. Restart Windows to complete the installation.

Besides, you can also use the following way to update driver software:

- 1. Insert the CD driver disk into the CD-ROM drive.
- 2. Right click the icon **Computer** on the desktop, and then click **Manage**



Figure 2.1

The Computer Management screen will appear. Click Device Manager, and then you will see various options on the right side. Click Other Devices, and then from the drop-down list, please find Ethernet Controller. Right-click it and then select Update Driver Software.



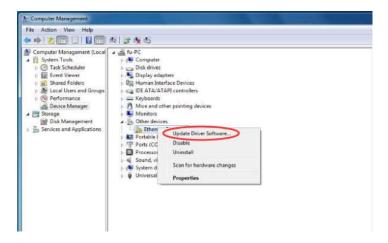


Figure 2.2

4. The **Update Driver Software** window will show up. Select **Browse my computer** for driver software.



Figure 2.3

5. Browse and choose the system driver location from Computer, and then click **Next**.



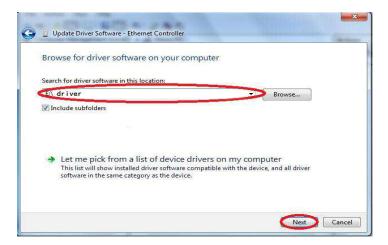


Figure 2.4

6. Wait a few seconds for the installation.

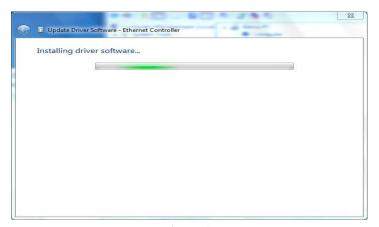


Figure 2.5

7. Click **Close** to finish the installation.



Figure 2.6



Appendix A: Specification

Specifications:			
Standards:	IEEE 802.3, 802.3u, 802.3ab, 802.3x, 802.1q, 802.1p		
Interface:	32-bit PCI or PCIe Standards		
	1*10/100/1000Mbps RJ-45 port		
Data Transfer Rate:	10/100/1000Mbps for Half-Duplex mode		
	20/200/2000Mbps for Full-Duplex mode		
Network Media:	10Base-T: UTP Cat. 3, 4, 5, cable (Maximum 100m)		
	EIA/TIA-568 100Ω STP (Maximum 100m)		
	100Base-TX: UTP Cat. 5, 5e cable (Maximum 100m)		
	EIA/TIA-568 100Ω STP (Maximum 100m)		
	1000Base-T: UTP Cat. 5e, 6 cable (Maximum 100m)		
Jumbo Frame:	7680 Bytes (XM-NA3500)		
Slot:	BootROM Slot (XM-NA3500)		
Flow Control:	IEEE 802.3x Flow Control (Full Duplex)		
LEDs:	Link/Act		
Operating Temperature:	0° ~ 40° C (32° ~ 104° F)		
Storage Temperature:	-40° ~ 70° C		
Operating Humidity:	10% ~ 90% Non-Condensing		
Storage Humidity:	5% ~ 90% Non-Condensing		
Supported OS:	Windows 2000/XP/Vista/7/8/8.1/10; Linux		
Emission(EMI):	FCC; CE		